




















-   **Up and down:** Increase and decrease values and move the cursor.
-   **Left and right:** Move the cursor and choose different screens.
-  **Star:** Activate the cursor or cancel changes
-  **Enter:** Choose a value to change, confirm your choice, or go to the main menu.
-  **Control Button:** Haul, stop, and down.
The motor will enter neutral if the button is pressed for more than five seconds.









Operations in the main menu: if the cursor is inactive, you can control the reel by:

- Reset depth:** Pressing  while the reel is stopped.
- False bottom:** Press  while the reel is going down. Press  while the reel is going down to turn it off.
- Slow down:** Press  while going down. Press  again to disable.











1 Screen 1 : Main menu.

-  **Fish Sensitivity:** (0-16) adjusts how much weight the reel needs to sense to detect a fish on the hook.
-  **Power:** (0-99) Adjusts the power during hauling.
-  **Jigging power:** (0-99) Controls how much power goes into each Jig.
-  **Jigging length:** (0-19,6m / 10,7fa / 64,3ft) Adjusts the length of each Jig.
-  **Bottom margin:** (0-19,6m / 10,7fa / 64,3ft) Adjusts how close the bottom of the jig goes to the seabed.

2 Screen 2: Fishing settings.


-  **Bottom time:** (0-990s) Adjust the time between checking for the bottom.
-  **Wait top:** (0-99s) Adjusts how much time is spent at the top of each jig.
-  **Wait bottom:** (0-99s) Adjusts how much time is spent at the bottom of each jig.
-  **Stepjigging:** (On-Off)  **Amount of steps:** The number of steps in a step jig.
-  **Mud seabed:** (On-Off) Makes adjustments so that mud pulling on the reel in an upjig won't be registered as fish biting.
-  **Seabed sensitivity:** (0-9,9s) Adjusts how long the reel has to register a slack on the line so the reel will register the seabed.
-  **Brake:** (0-30) If this setting is turned to something other than 0, then the slack sensor is turned off, and the reel senses the seabed by the reel no longer flowing.

3 Screen 3: Settings.


-  **Slack Top:** The top position of the slack sensor. Chosen with . The arm is put into the top position and registered with .
-  **Slack Bottom:** Bottom position of the slack arm. Chosen with . The arm is held down and registered with .
-  **Seabed slack sensitivity:** (0-48) Determines how much slack is needed to sense the seabed.
-  **Maximum speed:** (0-500) Adjusts the maximum speed of the reel in RPM (rotations per minute)
-  **Stop at Zero:** (On-Off) Decide whether the reel should stop jigging once the depth reaches 0.
-  **Reset:** Resets all settings to the default.


Screen 4: Jigging settings.




 **DNG jig:** Default jigging setting.

 **Speed controlled jig:** (On-Off) Controls whether the reel goes down at max speed or downjig speed.

 **Downjig speed** (0-500) Max reel speed if speed-controlled jig is turned on.

 **Slow acceleration:** (0-19,6m / 10,7fa / 64,3ft) Length until the reel reaches max speed with a fish on the hook.


 **Tangle detection:** (0-10) Controls how often the reel can detect slack until it detects a tangle.

 **User jig:** With the popup open, press  to create a new jig, and again to save the configured jig. Press  to select a jig.


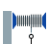
Screen 5: Fishing settings. This screen is in two parts. Scroll down to access all options.

 **DNG base settings:** Default settings of fishing systems.

 **Bait fishing:** The reel stops at the top and bottom of each jig, with slow jigging and low fish sensitivity.


 **Pollock system:** Fast jigs, high fish sensitivity, and a fast pull-up to the surface.

 **Step Jigging**  **Squidfishing**  **Mackerel**  **Mackerel w/ DNG-FS1 fishing equipment**


 **Brake system**  **Line haul:** System for pulling the line to the surface. Just hauling and stop.


 **Search systems:** (Total, Bottom, Surface)


Screen 6: Other settings.

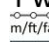
 **Brightness:** (0-10) Brightness of screen.





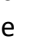
 **Buzzer:** (On-Off) Controls whether the reel gives off a sound when a fish is on the hook.

 **Buzzer at depth:** (0-19,6m / 10,7fa / 64,3ft) controls whether the reel gives off a sound while pulling the reel up and at what depth.

 **Auto down:** (0-30s) If the setting is anything over 0, the reel will automatically send the line back down after this time on the surface.

 **Power factor:** (0-10) Controls the softness of the in-reel by limiting power.

 **Unit system:** (m-ft-fa) Controls what unit the reel uses, meters, feet, or fathoms.

 **PIN Lock:** (Unlocked/Locked) To lock the reel with a PIN code, you open this setting and press . Then you are asked to enter a four-digit code using the arrow keys and confirm with . Then you must type the PIN in once more to confirm the pin. The lock on the screen goes from an unlocked lock to a locked lock to confirm that the reel is locked. To turn off the PIN, you choose the lock settings, press , and then . If the reel is locked, it will require the pin number to turn it on. It is important to remember this PIN; if it is forgotten, the jigging machine must be sent to a certified workshop to reset it.